

## 10 INDUSTRIAL WASTE

### 10.1 PAINTING AND PRINTING

Parts have to be painted for reasons of corrosion protection, differentiation and aesthetics, to name just a few. Most paints today are solvent based and are applied by liquid spray method. The paint is mixed with carrier and then sprayed onto a surface with an air pressurized spray gun. Most carriers are organic solvent based. During this process two waste components are generated: waste solvents and paint sludges. The paint sludge is normally the larger one of these two. It is generated when overspray happens and solvent dries. The recovery of this component typically happens in the scrubber sump. The second waste is generated during the cleaning process.

Printing industry faces a similar problem. Unused inks or paper with ink residues and then solvents used to clean the presses and other equipment.

In both cases VOC is also present. Alternatives discussed in the following chapters can be of significant help in reducing all hazardous pollutants.

#### 10.1.1 Paint Wastes in Metalworking Industries

##### 1. Some practical considerations

Painting is a necessary operation for corrosion protection. It is usually the largest source of waste in the plant. Most of the plant managers were sold on at least one of these “sacred cows”:

- Do not try to change the way painters do things.
- Paint waste is an inevitable part of the product cost.
- If it ain't broke, why try to fix it?

What must be done before you can successfully reduce painting wastes?

- Focus management's attention onto the true costs of paint wastes.

##### 2. Common problems to get management's attention:

- VOC emissions:
  - Purchase price of all that solvent!
  - Close to permit limits?
  - Could the limits be increased?
  - How much additional production could be taken on before exceeding limits?
- Special wastes:
  - Paint booth strappings
  - Booth filters and lining material

-Water-curtain skimmings

- Wastewater:
  - If operating a treatment plant, is "goop" from booth curtain causing problems?
  - If discharging to a POTW, are you paying surcharges for bod, cod, or metals?
- Cost accounting:
  - Few companies have ever really put together the full story on paint waste costs

3. What happens when management reconsiders painting?

Company A:

-Figured true cost of "low-cost" product line.

Company B:

-Collect powder-paint from cleanouts for use on items needing protection, but not appearance-sensitive.

Company C:

-Collect paint leftovers and use it on hidden structural parts.

Company D:

-Works with paint supplier to recycle paint.  
-Actively markets using recycled paint.

Company E:

-Rebuilt paint room to handle color changes.  
-Replaced solvent pre-cleaning with aqueous.  
-Revised spray system for low-VOC paints.  
-Installed thinner recovery system.  
-Found a way to re-use solvent still bottoms.

### **10.1.2 Reduction in Paint Waste**

Over the past decade people have learned that either burying or burning hazardous waste is a problem. In recent years, Congress and the EPA have emphasized effective treatment of hazardous waste prior to its land disposal. Treatment alone, however, will not remedy all hazardous waste problems. The reduction of waste generation, recovery and reuse is essential. As a result, the need for treatment, storage and disposal of waste will be reduced as well.

#### **10.1.2.1 Introduction**

Virtually every painting process involves hazardous materials or produces hazardous

waste. Waste reduction, though not inexpensive, will conserve our nation's resources and protect public health and the environment. At the same time it will probably save businesses money in a long run.

Over the past two decades, an increased awareness has developed of harmful effects to human health and the environment from uncontrolled releases of hazardous substances and wastes as pollutants. Everybody has to pay attention to preventing hazardous wastes problems by cutting down on generating the waste at its source. Preventing the generation of hazardous waste is inherently preferable to controlling it after it is generated. The following quotation reflects the national policy formulated by the U.S. Congress:

The Congress hereby declares it to be the national policy of the United States that, wherever feasible, the generation of hazardous waste is to be reduced or eliminated as expeditiously as possible. Waste nevertheless generated should be treated, stored, or disposed of so as to minimize the present and future threat to human health and the environment.

#### **10.1.2.2 Paint Application**

<b>PAINTING METHOD</b>	<b>TRANSFER EFFICIENCY [%]</b>
Conventional air atomized spray	30-60
Conventional pressure atomized spray	65-70
Electrostatic air atomized spray	65-85
Electrostatic centrifugal atomized spray	85-95
Powder coating	90-99
Roller/Flow coating	90-98

**Table 10.1: Transfer Efficiency in Painting**

Most paint application wastes are caused by either paint overspray, or the paint not reaching the target. The amount of overspray results from the design and operation of the system used. The efficiency of some of the systems used is listed in **Table 10.1**.

Some general recommendations follow:

- Use equipment with low overspray. Implementation of better employee operating practices are essential in cases when the spray systems are operated manually. Proper training of operators and all personnel who work with the painting machinery promotes waste reduction. The good condition of an application equipment reduces waste and produces better finish as well. Therefore, preventive maintenance is extremely important. All parts should be pe-

riodically, or as necessary, cleaned. Also lubricate in places recommended by the equipment manufacturer.

- To avoid overspray keep air pressure as low as possible and position the spray gun perpendicular to the surface.

### ***10.1.2.3 Paint Stripping***

Paint stripping comes into a picture when a bad finish has been produced, the coating has to be removed and the process of painting repeated. Many paint stripping wastes are generated because of a failure of the system. Some waste reduction methods are listed below:

- Inspect parts. The surfaces must be clean, dry with no rust.
- Avoid overspray by using proper painting technique.
- The maintenance of the equipment is essential.
- Use non-phenolic strippers to reduce toxicity associated with phenol and acid additives.
- Locate solvent soak tanks away from paint curing ovens to reduce the adverse effect of solvent on a painted surface.
- Use mechanical (cryogenic) paint stripping with plastic bead blasting to handle parts made of soft metal. Such items are inappropriate for sandblasting or glass bead blasting.

### ***10.1.2.4 Solvents / Thinners***

It is very desirable to reduce solvent emissions produced by evaporation from process equipment and coated parts. At the same time the subject of solvent recovery is of utmost importance. The following measures can reduce either:

- Keep solvent tanks from heat sources.
- Use high solids content formulations.
- Use powder coating techniques.
- Use water based paints.
- Reuse cleaning solutions and solvents.
- Try to minimize variety of solvents in use.
- Sequence batches from light to dark.

### ***10.1.2.5 Waste Reduction Technologies In Painting***

- High Transfer Efficiency Paint Application

Problem:	Overspray
Solution:	HVLP paint guns
Benefit:	Reduced paint consumption (CA. 25%)
Disadvantages:	Cost, applicability, operator, training

- Gun Cleaning

Problem:	Solvent air emission from gun cleaning
Solution:	Enclosed paint gun cleaners
Benefit:	Reduced solvent consumption
Disadvantage:	Start-up cost

- VOC Emissions

Problem:	VOC emissions from high-solvent paints
Solution:	Water-borne and high-solids paints
Benefits:	Reduced emissions, solvent wastes
Disadvantages:	Availability, corrosion, drying

- Spent Clean-Up Solvents

Problem:	Management Of Hazardous Waste
Solution:	Recycle with solvent recovery unit
Benefits:	Reduced expenditure
Disadvantages:	Waste segregation, energy, labor, nitrocellulose explosion hazard

### 10.1.3 Minimization of Waste in Printing Operations

#### Image Processing

The primary waste streams are wastewaters containing photoprocessing chemicals and silver dissolved from film development. Most chemicals are biodegradable and discharged into the sewer lines. Permits are required and biochemical oxygen demand (BOD) is monitored. Silver should be recovered and mercury specially handled if present.

#### Plate or Cylinder Processing

Photographic processes are used in all of the major printing operations for image conversion and plate making. Photographic wastes therefore comprise a large portion of the hazardous waste generated in these industries. Photographic processing solutions, developers, hardeners, plating chemicals, fountain solutions, or fixing baths that are sent to publicly owned treatment works (POTW) for disposal, however, are exempt from new RCRA requirements. Silver containing solutions that pass through electrolytic chemical replacement, or ion exchange silver recovery units located on the premises are exempt in a similar fashion. However, if the wastes are sent off site for recycling the wastes must be accompanied by the Manifest.

#### Printing Process

In the printing operations the waste is mostly the printing ink. The solid wastes include waste paper from printing imperfections from start of the run setups and end of the run cleanups, web breaks and tears, paper at the end of the web, overruns, paper wrappers, cardboard cores and miscellaneous solid wastes. In addition there are used ink containers, used plates, damaged or worn rubber blankets, waste press oils used for lubrication, cleanup solvents and rags.

### ***10.1.3.1 Material Handling and Storage Options***

Good practices can reduce or even eliminate waste resulting from obsolescence and improper storage.

- The proper storage conditions will guarantee stated shelf life of many chemicals.
- Reusing rinsewater as long as possible.
- Use marbles in small scale photo developers to bring the liquid level up.
- Keep the storage area clean to prevent contamination.
- “First-in-first-out” prevents missing expiration dates.
- Raw material should be ordered in just-in-time fashion as much as possible.

### ***10.1.3.2 Solid Waste***

Portion of the solid waste generated by the printing industry is nonhazardous. These wastes should be managed using reduction techniques, source reduction and reduction.

- Used lithographic plates should be sold for aluminum recycling.
- Recycle empty containers.
- Recycle spoiled photographic film and paper.
- Install web break detectors.
- Monitor press performance.

### ***10.1.3.3 Wastewater Options***

The toxicity of wastewater from plating operations can be reduced by dragout reduction. Examples of different options follow.

- Position the part on the rack to drain more easily.
- Use drain boards to collect dragout and return it to the plating tank.
- Raise temperature to reduce surface tension of the solution.

Other waste reduction options include:

- Material substitution where possible.
- Wastewater reduction by countercurrent washing, using squeegees to wipe off excess liquid and extending the bath life.
- Silver recovery and spent chemicals reuse.
- Removal of heavy metals.

### ***10.1.3.4 Cleanup Solvents and Waste Inks***

Ink recovery machines are currently on the market and come in variety of sizes. Another

possibility might be to send the waste ink back to the manufacturer for black ink production. Solvents can be recovered by simple batch distillation if quantities justify the purchase of the equipment, otherwise could be recycled with professional recyclers.

- Segregate spent solvent and inks according to the color.
- Use as little solvent as possible.
- Schedule jobs using light colors first, possibly reducing the necessity for cleaning.
- Save unused ink for the future
- Try to useful prolong life press wipes by using the dirty ones for the first passes.

## § *Case Study of Screen Printing Plant*

### Process Description

This plant uses screen printing to produce, in several varieties and color schemes, fleet (transportation truck) decals, beverage dispensing machine colored panels and toothbrush backings. Raw materials include plastic sheets, rolls and spools of plastic stock, inks, adhesives, urethane and various other chemicals and solvents related to image production and printing operations.

The printing process begins with the plant receiving a mylar sheet with a positive image, paper copy, or a computer file from clients. Some artwork is done in-house. Images received on a computer disk, and other images developed on-site, are processed in a computerized system to yield a mylar positive. The image sheets are then transported to the screen-making department.

Printing screens range from 2 inches by 4 inches to 4 feet by 10 feet in overall dimension. To produce a new screen, mesh material is unrolled, cut to size then stretched and mounted on rectangular aluminum frames.

Screen images are produced in several steps. First, large screens are coated with a photosensitive emulsion in an automated system. Emulsion is applied to smaller screens manually. Coated screens are then covered with mylar sheets containing positive images and are placed on a "burn table" which exposes screens to ultraviolet light for a specified period of time which hardens the emulsion through transparent areas exposed to light. After exposure, screens are removed from the "burn table" and the uncured emulsion is washed away with a warm water high-pressure spray.

A prepared screen is mounted horizontally on a press, and ink is troweled into an above-screen reservoir. Ink used in printing is received in 3 to 5 gallon containers from which it is used directly or is blended to customer specified colors in an ink-mixing area. During printing, a mechanical "wipe" moves across the screen and forces ink through porous areas onto substrate sheets. Subsequent use of other screen images in a set produces a multi-colored image on the sheets. After printing, the substrate is placed on a conveyor for transport through an ink-curing oven. After curing, some of the printed substrates are coated with an adhesive or a thin urethane film followed by heat-curing. Finished materials are inspected, packaged and shipped to customers.


At the end of a printing run, screens are cleaned for reuse. Initially, excess ink is removed from screens with a putty knife. Next, they are hand-wiped with solvent-wetted paper towels while still positioned on the press. After surface ink removal, screens are removed from presses and are transported to a screen washing room. In this room, screens are positioned upright over a trough and ink-remover, and occasionally a "ghost" image remover is brushed into screen material, followed by a high pressure heated water rinse. In cases where it is not required to save a screen image, an emulsion remover is used to remove hardened emulsion. Clean screens are allowed to air dry and are returned to storage for future use.

Inventory of Waste Producing Operations:

1. Raw material receiving
2. Inventory control (expired raw materials)
3. Image production
4. Screen making
5. Ink handling
6. Printing
7. Special coating processes
8. Plant and equipment cleanup
9. Product shipping
10. Screen cleaning
11. On and Off-site materials recycling
12. Office functions

AR Example #1

1. Products produced in plant:  
Screen printed plastics sheets and film
2. Selected waste producing process:  
Ink cleanup utilizing liquid solvents which are currently removed from paper towels with use of a wringer, collected in 55 gallon drums, and shipped off-site as a hazardous waste.
3. Waste streams generated:
  - Contaminated liquid solvents (alcohol and solvent cleaners)
  - Solvent evaporation during handling
  - Soiled paper towels
4. Waste stream(s) selected for reduction:
  - Waste liquid solvents (alcohol and solvent cleaners).

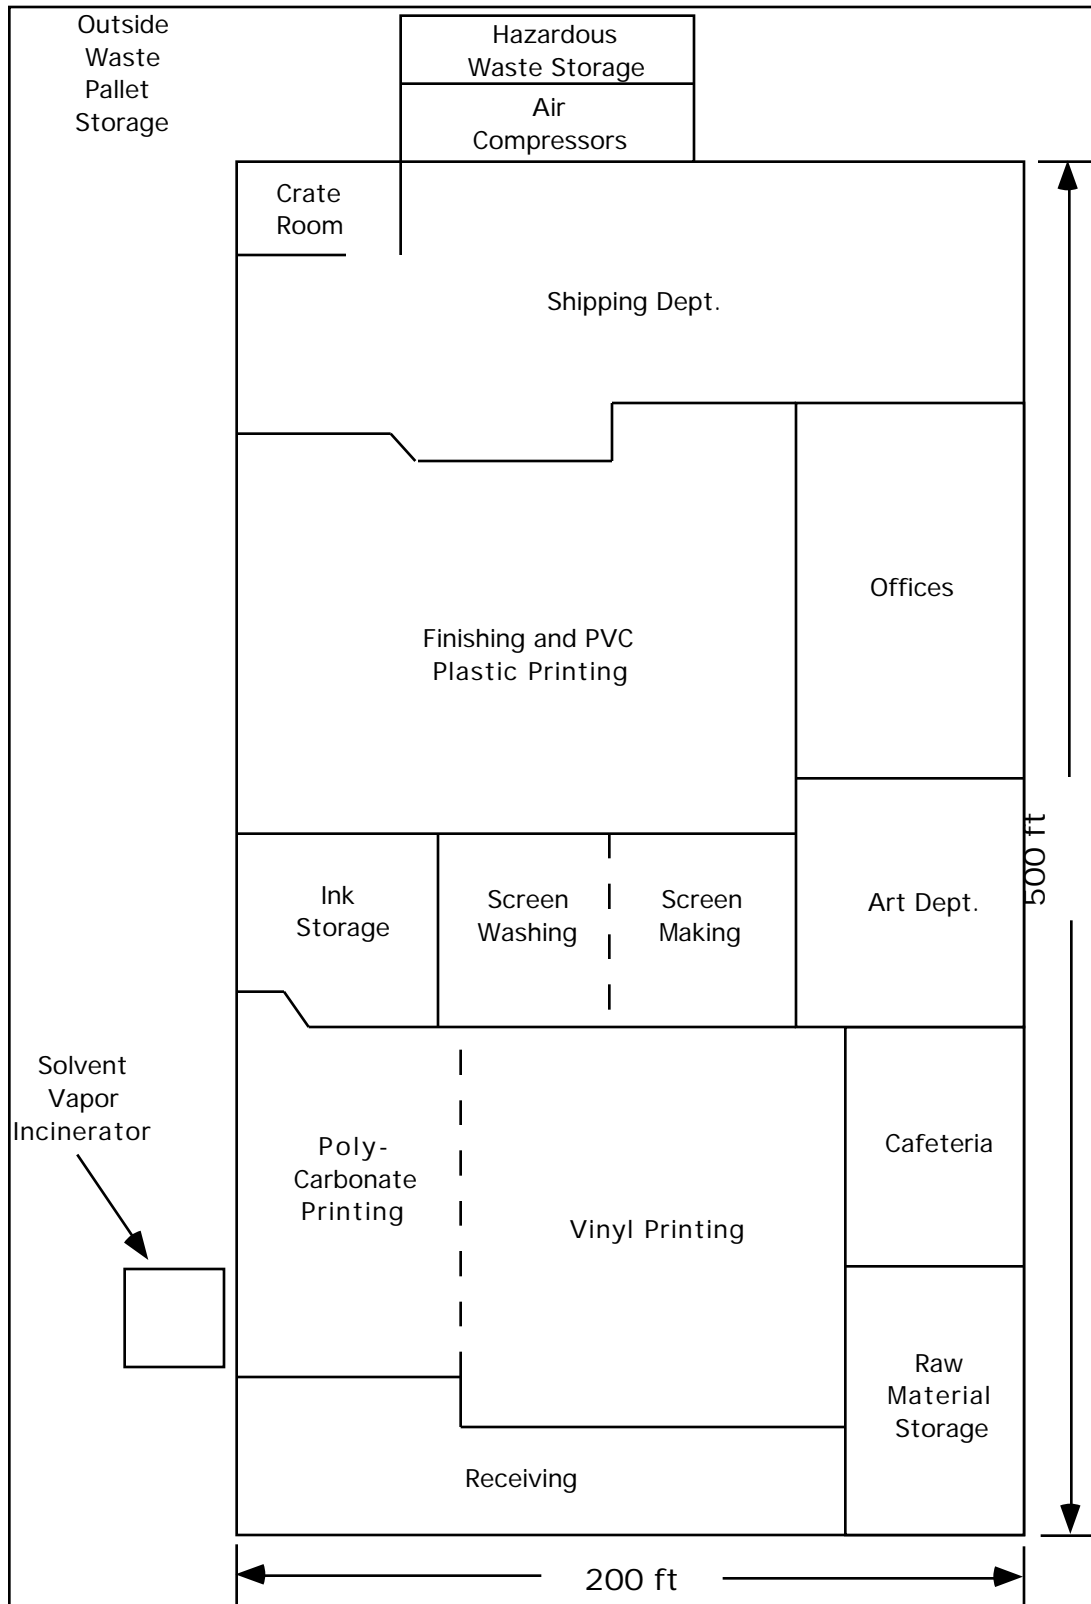

**Figure 10.1: Plant Layout for “Screen Printer Case Study”**

5. AR identification, evaluation, and selection:

- Extend printing runs to minimize clean-up operations (insufficient information).
- Eliminate use of solvents by using a water-based ink (technical feasibility questions).
- Install a distillation unit for recovery and reuse of solvent and alcohol (selected for recommendation).

6. Outline of AR analysis:

*Reduction in Waste Amounts:*

- $(\text{Amount of solvent shipped off-site/yr})(\% \text{ of solvent recoverable through distillation}) = \text{Solvent waste reduction/yr.}$
- $(\text{Amount of alcohol shipped off-site/yr})(\% \text{ of alcohol recoverable through distillation}) = \text{Alcohol waste reduction/yr.}$

Cost savings associated with waste reduction:

- $(\text{Solvent waste reduction/yr})(\text{Purchase cost/lb for solvent}) = \text{Solvent raw material cost savings/yr}$
- $(\text{Alcohol waste reduction/yr})(\text{Purchase cost/lb for alcohol}) = \text{Alcohol raw material cost savings/yr}$
- $(\% \text{ of total hazardous waste (HW) adm. time spent on solvent and alcohol})(\text{Cost of HW adm. time/yr})(\% \text{ of solvent and alcohol recoverable through distillation}) = \text{Administrative cost savings associated with solvent and alcohol/yr}$
- $(\% \text{ of total HW labor costs associated with solvent and alcohol})(\text{Total HW labor costs/yr})(\% \text{ of solvent and alcohol recoverable through distillation}) = \text{Labor cost savings associated with solvent and alcohol/yr.}$
- $(\% \text{ of solvent recoverable through distillation})(\text{Amount of solvent shipped off-site/yr})(\text{Cost of solvent HW shipment}) = \text{Off site removal cost savings for solvent/yr.}$
- $(\% \text{ of alcohol recoverable through distillation})(\text{Amount of alcohol shipped off-site/yr})(\text{Cost of alcohol HW shipment}) = \text{Off-site removal cost savings for alcohol/yr.}$

7. Sources of needed data:

- Amount of solvent shipped off-site/yr (from purchasing records)
- % of solvent recoverable through distillation (estimated by assessment team).
- Amount of alcohol shipped off-site/yr (from purchasing records)
- % of alcohol recoverable through distillation (estimated by assessment team).
- Purchase cost/lb for solvent (from purchasing records)
- Purchase cost/lb for alcohol (from purchasing records)
- % of total HW administration time spent on solvent and alcohol (estimated by plant manager)
- Cost of HW administration time/yr (estimated by plant manager)
- % of total HW labor costs associated with solvent and alcohol (estimated by plant manager)
- Total HW labor costs/yr (estimated by plant manager)
- Amount of solvent shipped off-site/yr (from shipping manifests)
- Cost of solvent HW shipments (from shipping manifests)
- Amount of alcohol shipped off-site/yr (from shipping manifests)
- Cost of alcohol HW shipments (from shipping manifests)

## 8. Calculations:

*Reduction in waste amounts:*

- $(78,936 \text{ lbs/yr})(90\%) = 71,042 \text{ lbs/yr}$  reduction
- $(42,504 \text{ lbs/yr})(90\%) = 38,253 \text{ lbs/yr}$  reduction

*Cost savings associated with waste reduction:*

- $(71,042 \text{ lbs/yr})(\$0.55/\text{lb}) = \$39,073/\text{yr}$  savings
- $(38,253 \text{ lbs/yr})(\$0.35/\text{lb}) = \$13,388/\text{yr}$  savings

## 10.2 METALWORKING


In order to provide friction reduction and cooling of the machined part as well as the tool bit, coolant fluids are introduced into a point of application. The fluid also helps to remove metal particles (chips). The fluids can be categorized into: straight oil based, synthetic or semisynthetic and soluble oil. Today the most common are soluble oil coolants. Water is the major ingredient of these oils. The attempt should be made to reduce the volume of metalworking fluids. The way to do that is to introduce reconditioning and recycling of the fluids.

### 10.2.1 Sources and Nature of Coolant Waste

1. Outdated or contaminated raw materials (coolant concentrate, additives)
  - Rare occurrences
2. Spills and "splatter loss"
  - Use of paper towels or rags to wipe-down machine surfaces; may be disposable with landfill waste.
  - Use of absorbents on floor to collect liquid coolant; may be disposable with landfill waste.
  - Mop water from floor cleanup; may be added to liquid coolant waste shipped off site or discharged into a sewer (if allowable).
3. Dragout on workpieces and metal shavings
4. Evaporation of volatile substances (e.g., water) at all air interfaces
  - Periodic need to add make-up reagents (e.g., water).
5. Degradation of use characteristics
  - Physical contamination with tramp oil, dust and debris.
  - Bacterial contamination: offensive odor (rancidity) discourages continued use.
  - Incorrect off-specification formulation.

### 10.2.2 Measures for Reducing Metalworking Coolant Waste

1. All waste streams
  - Redesign products to eliminate some or all machining steps
  - Utilize "dry" metalworking (e.g. grinding) where feasible
2. Outdated raw materials
  - Improve inventory control

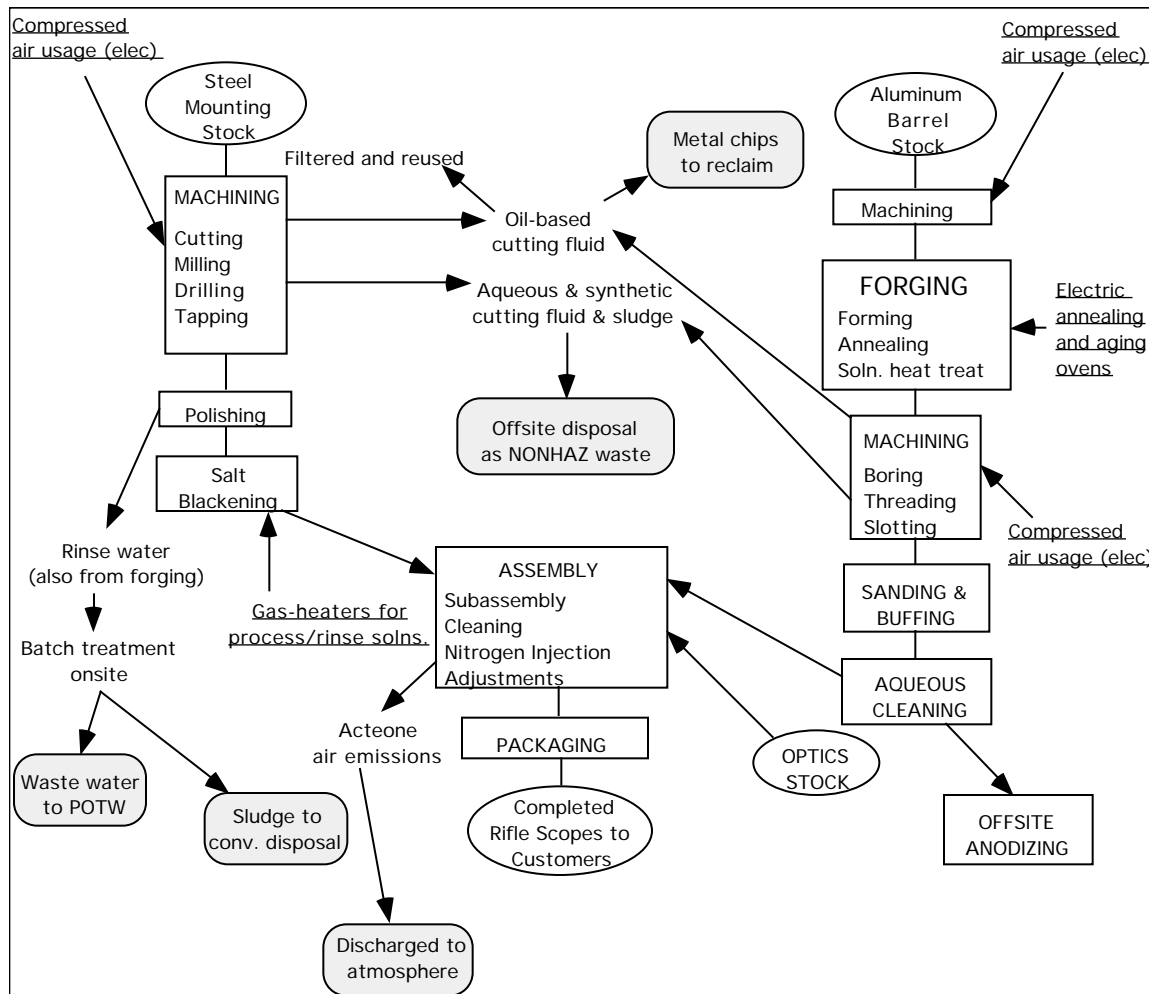

**Figure 10.2: Process Flow Diagram for Metalworking Industries**

3. Spills and "splatter loss"

*Spills*


- Improve materials handling methods

*Splatter loss*

- Install splash-guards on equipment
- Reposition coolant nozzles to minimize splatter loss
- Reduce coolant flow rate onto workpiece

4. Dragout on workpieces and on metal shavings

- Drain and recycle coolant collected in shaving containers
- Centrifuge shavings and recover coolant for reuse
- Use lower viscosity coolant

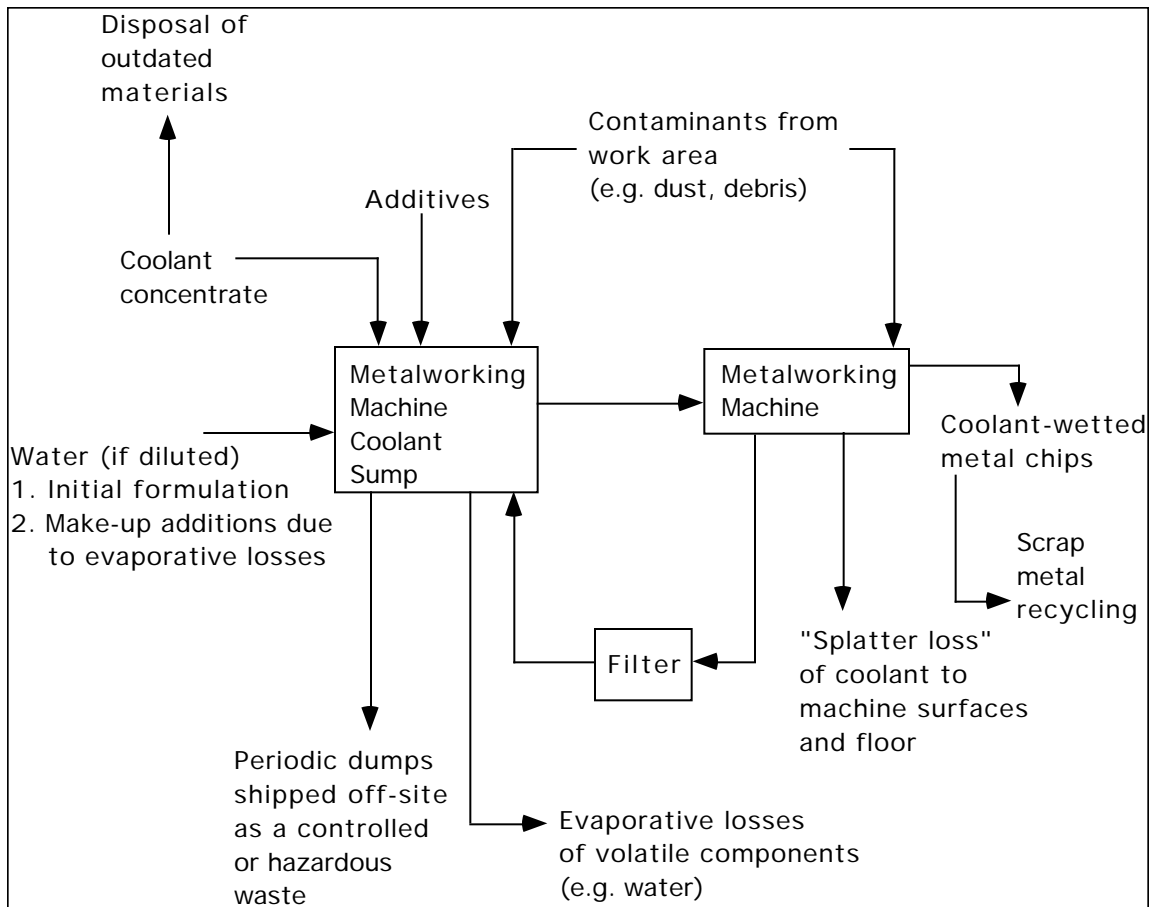

**Figure 10.3: Metalworking Coolant Material Flows**

5. Evaporative losses

- Cover coolant sump tanks
- Minimize coolant heating (Add insulation, actively cool)

6. Degradation of coolant characteristics

Extend coolant life by:

- a) Optional formulation and reformulation
  - Maintain water quality: testing and treatment
  - Maintain proper concentrations of active ingredients: periodic testing
- b) Prevent contamination
  - Cover coolant sump tanks
  - Degrease metals before machining (may generate new waste streams)
- c) Remove contaminants (Self-contained systems available)
  - Oil: absorbents, skimmers, coalescers, aeration, porous media separators, centrifugation
  - Participants and metal fines: filtration, settling, coalesces, cyclones, centrifugation, magnetic separators
  - Bacteria: pasteurization, add bactericides, timely removal of metal chips and fines, agitate coolant in sumps

7. Disposal of waste coolant

Reduce volume of waste water-based coolant shipped off site

- a) Treat chemically to allow discharge into a sewer
- b) Physical pretreatment to allow water discharge into a sewer: ultrafiltration
- c) Use evaporator to reduce waste stream volume

### **10.3 CLEANING AND DEGREASING**

The way to clean surfaces of grease, oils, and other organic substances is to employ an organic solvent. During the process of cleaning substantial volume of pollutants is generated. The pollutants can be classified into two categories. The liquid waste solvent and degreasing agents which serve as carriers for unwanted organic matter, and emissions to the air containing volatile cleaners. The industry uses cold cleaning, vapor degreasing, and precision cleaning. Cold cleaning means simple dipping of a part into a solution of a solvent or applying it onto a part with a brush or cloth. Vapor degreasing uses dedicated equipment where the solvent is heated to a point of boiling, producing solvent saturated vapor. The part is being inserted into the area, vapor condensates on the surfaces of the part, and drips down back into the liquid bath taking the grease with it. Precision cleaning is used for instruments or electronics. The solvents have to be pure and evaporate very rapidly.

### 10.3.1 Solvents

A main focus of this chapter is on solvent wastes primarily because solvents are widely used in industry and because of their effect on human health and the environment. Solvents used in industry are essentially organic compounds such as aliphatic or aromatic hydrocarbons, esters, ethers, ketones, alcohols, amines, halogenated hydrocarbons. Not only are many of these solvents toxic to living organisms, but the very same properties that make them useful are responsible for their potential threat to the environment and human health. In particular, their high volatility results in air emissions which can cause air pollution and flammability problems at disposal sites. The hazardous constituents of solvents persist in the environment. Finally, land disposal of solvent wastes is a problem because of the solvents' ability to dissolve or penetrate polymeric liners and to dewater clay liners.

A hierarchy for solvent waste reduction would include:

1. Source Reduction - focuses on in-plant changes that can be made to either reduce or eliminate the generation of the solvent waste. This alternative is the most preferable waste management option, and should be explored first.
2. Recycling - refers to the reuse of a wastestream substance as an ingredient or feedstock in a production process, or reclamation of a waste material, involving recovery of reusable constituent fractions. Recycling is less preferable than source reduction, and should be explored second.
3. Treatment - refers to destruction of wastes through the use of technologies such as biodegradation, fixation, and incineration. Treatment is the least preferable option of the three components of waste reduction, and should be explored after source reduction and recycling alternatives are addressed.

Source reduction, recycling, and treatment practices all serve to either reduce the volume or the toxicity of wastes that are generated and ultimately land disposed. Technically and economically feasible source reduction, recycling, and treatment methods for solvent wastes exist.

For solvent waste reduction there are three basic source reduction objectives.

1. Eliminate solvent use.
2. Reduce solvent use or loss.
3. Increase solvent recyclability.

#### *10.3.1.1 Regulatory Trends in Solvent Waste Management*

The 1984 amendments to RCRA impose a national ban on the land disposal of halogenated and non-halogenated solvent waste (RCRA waste nos. F001-F005). The land-ban restrictions were effective in November, 1986 (RCRA Sec. 3004(e)). A nation-wide variance for SQGs ended on November 8, 1988, and these new land-ban restrictions will impact solvent waste management practices. In the opening clauses of RCRA, Congress declared that "certain classes of land disposal facilities are not capable of assuring long-term containment of certain hazardous wastes ... and land

disposal, particularly landfill and surface impoundment, should be the least favored methods for managing hazardous wastes” (RCRA Sec. 1002(a)(7)). Congress further stated that “alternatives to existing methods of land disposal must be developed ...” (RCRA Sec. 1002(a)(8)).

### ***10.3.1.2 Solvent Use Intensive Industries***

Solvents are commonly used in dry cleaning, cold cleaning, solvent extraction, and vapor degreasing. Solvents are also essential to the production of coatings, stains, wood-treatment chemicals, printing inks, pesticides, and agricultural chemicals. Solvents are used as inert reaction media in chemical and pharmaceutical formulation.

Solvents are incorporated into a manufactured product for several applications, such as printing ink. The volatility of solvents imparts fast-drying properties in the ink. In other applications, such as vapor degreasing of metal parts, the use of solvent is confined to the cleaning process, and the solvent becomes “spent” as it picks up oil and grease from the metal parts.

Most applications result in generation of a solvent waste and, therefore, most user industries are also generators of solvent waste. Solvent wastes include off-specification batches of products containing solvents and contaminated or spent solvents from process applications. One method assessors may use to identify solvent-user industries is to identify solvent waste generators and assume that high-volume solvent waste generators are high-volume users. Assessors should examine a business’s waste manifests to determine if the business is a solvent waste generator. Some industries that employ solvent-use intensive operations include:

- Solvent Reclamation - SIC 7399
- Coatings Manufacturer - SIC 2851
- Cyclic Compounds and Intermediates - SIC 2865
- Industrial Organic Chemicals Manufacturing - SIC 2869
- Pesticides and Agricultural Chemicals Formulation - SIC 2879
- Inks Manufacturing - SIC 2893
- Chemical Preparations - SIC 2899
- Petroleum Refining - SIC 2910
- Semiconductors Manufacturing - SIC 3674
- Electronic components Manufacturing - SIC 3679
- Motor Vehicles Manufacturing - SIC 3711
- Aircraft Manufacturing - SIC 3721
- National Security - SIC 9711
- Dry Cleaning - SIC 7215, 7216, 3582
- Vehicle Maintenance - SIC 5511, 7538
- Pharmaceuticals Manufacturing - SIC 2834
- Metal Furniture Manufacturing -SIC 2514, 2522
- Photographic Processing - SIC 7395, 7333, 7819

### ***10.3.1.3 Solvent Use Intensive Operations***

Compared to the number of industries that use solvents and generate solvent waste, the number of specific types of operations in which solvents are used is relatively small. For example, one solvent-use intensive operation, parts cleaning, is performed in electronic components manufacturing, vehicle manufacturing, aircraft manufacturing, metal finishing industries, and in equipment maintenance shops of almost any industrial facility. Similarly, equipment cleaning is performed in paint manufacturing, pesticide formulation, semiconductors manufacturing, and other manufacturing processes. The following is a list of these common solvent-use intensive operations.

- Parts Cleaning
- Equipment Cleaning
- Surface Coating Application
- Reaction Medium
- Entrainer Azeotropic Distillation
- Extraction Medium

#### Solvent Wastes

Solvent wastes are generated primarily by the following industrial applications.

- Paint and coating plants that use solvents to clean equipment
- Metal working and machine plating shops that use solvents during degreasing
- Cleaning of surfaces in the electrical, electronics, and printing industries

### ***10.3.1.4 Solvent Recycling Technologies***

The main solvent and reduction techniques include:

1. Distillation - separation techniques which rely on the boiling point differences of the components of a liquid waste.
2. Solids Removal - elimination of suspended particles to reduce fouling.
3. Emulsion or Dispersion Breaking - the separation of solvent or oil droplets in water, or of water droplets in oil.
4. Dissolved and Emulsified Organics Recovery - organics separation techniques which concentrate the organics so they can be recovered.

Each of these operations may be performed on their own or in sequence. The recyclable product may be the solvent or the isolated contaminants, or both.

#### On-Site Recycling Equipment

Due to recent developments, small solvent recycling units are now commercially available for businesses generating low volumes of waste solvents. The simple heating and condensing systems remove impurities from the solving waste stream, returning the solvent or the solvent blend

to the process which generated it.

§ *Example 1*

B/R Instrument Corporation's solvent recovery system was used by a laboratory at Toronto General Hospital. The distillation unit cleaned xylene and chloroform to 100% purity and isopropyl alcohol to 99.7%. The lab recovered \$180 per week of solvents which could otherwise have required costly off-site disposal.

Some companies have been able to scale down their equipment considerably since the equipment was first marketed.

§ *Example 2*

The Brighton Corporation introduced its first solvent recovery system over 20 years ago. They now manufacture units with capacities as small as 7-1/2 gallons of solvent treated per hour.

§ *Example 3*

The Finish Engineering Company manufactures solvent recovery equipment in a variety of sizes. The smallest of these units reclaims solvents having a boiling point of 160 degrees C or less. The waste solvent is reclaimed in 15 gallon batches, although clean solvent can be drawn off during operation. Recovery levels range from 80 to 95%, depending on the amount and type of contamination.

### **10.3.1.5 Solvent Loss Reduction Options**

Solvents are used most frequently in:

1. The soak tank
2. The vapor degreaser

The vapor degreaser, because it produces a lot of air pollutants, has been studied in much greater detail with respect to pollution control. However, the main methods for reducing waste are the same for both the degreaser and the soak tank. The two most important goals are to reduce solvent vapor loss and to maintain solvent quality. The following methods were considered the most successful in achieving these objectives.

Implement better operating practices to reduce wastes. Good housekeeping procedures can significantly affect the amount of solvent waste produced. These include:

1. Separators should be cleaned and checked frequently to avoid cross-contamination of solvents or water which can lead to acid formation. Also, parts should not be allowed to enter the degreaser while wet.

2. Promptly removing sludge collected at the bottom of the tank increases cleaning efficiency by not allowing contaminants to adsorb solvent and dissolve into the solution. As solvents are used, their ability to neutralize acids lessens. While the common practice is to add new solvent to the aged solvent, a more efficient method is to analyze the solvent and add specific components. The expense of analysis will be offset by the savings in solvent for tanks of approximately 500 gallons or more.

Based on better operation practices, other waste reduction techniques include:

- Standardizing the solvent used to allow for recycling.
  - Consolidating cold cleaning operations into a centralized vapor degreasing operation.
  - Locating cold cleaning tanks away from heat sources.
  - Controlling the amount of heat supplied to vapor degreasers.
  - Avoiding spraying parts above the vapor zone or cooling jackets.
  - Avoiding solvent vapor drag-out.
3. Install lids/silhouettes on tanks - all tanks should be covered when not in use. Covers that can be used even during the cleaning process (known as "silhouette entries") are available for an even greater reduction in vapor loss. All covers should be designed to slide horizontally over the top of the tank, since this disturbs the vapor zone less than hinged covers.
  4. Increase the freeboard space on tanks - an increased freeboard has been proven to decrease emission. Early degreasers had a freeboard equal to one-half the tank width. When the U.S. EPA in the mid-1970s recommended a 75% free board, emissions were decreased up to 46%. Increasing the freeboard to 100% can provide an additional 39% reduction where air turbulence is present.
  5. Install freeboard chillers in addition to cooling jackets - a second set of refrigerated coils is installed above the condenser coils. These coils chill the air above the vapor zone and create a second barrier to vapor loss. Reductions in solvent use of up to 60% have been realized. However, water contamination of the solvent can occur due to frost buildup on the coils, so special water collection equipment is also necessary.

Reduction of solvent wastes can be accomplished through a wide variety of existing techniques and practices in applications involving parts cleaning, process equipment cleaning, coating applications, air emission control, and other operations. Source reduction measures should be addressed before recycling options are considered. Treatment of residuals, although ultimately necessary, should be addressed last, after source reduction and recycling options are fully explored. Source reduction techniques are extremely processor application-specific. While very effective, some source reduction techniques should be applied with caution because of cost implications. Good operational control of human factors in production is of paramount importance to discrete or batch operations. Improvement of operating practices in such areas as employee training, closer supervision, and employee motivation can accomplish a lot with a minimum cost.

Solvent and waste recycling options include on-site or off-site reclamation, primarily through distillation and burning with energy recovery. Recycling technologies mostly rely on conventional proven techniques. Treatment alternatives rely mainly on thermal, chemical, or biological oxidation of solvent wastes. Techniques are available to deal with a wide range of waste types and concentrations. The current regulatory climate provides incentives for reducing solvent wastes.

**10.3.1.6 Halogenated Solvents****PROS:**

- Stability
- Ease of Drying
- Effectiveness in removing oils

**CONS:**

- Restrictions on use/current phase-out
- Stratospheric ozone depletion
- Global warming potential
- Ground smog formation
- Hazardous solvent wastes
- Worker safety & health:- Chronic and acute effects
  - Carcinogenic
  - Teratogenic

Chlorinated Vapor Degreasing Solvent	Boiling Points		Evaporation
	°F	°C	Rate @ 25 °C
1,1,1 Trichloroethane	166-169	74-76	6.00
Trichloroethylene	189	87	6.39
Perchloroethylene	250	121	2.59
Methylene Chloride	104	40	14.5
Freon (CFC-113)	117-118	47-48	21.00

\* Relative to n-butyl acetate, which has been assigned a value of 1

**Table 10.2: Boiling Points and Relative Evaporation Rates for Solvents**

Solvent	OSHA Limits*		ACGIH**
	Time Weighted Average	Short-Time Exposure Limit	Threshold Limit Value
1,1,1 Trichloroethane	350 ppm	450 ppm	350 ppm
Trichloroethylene	50 ppm	200 ppm	50 ppm
Perchloroethylene	25 ppm	170 ppm	50 ppm

\* ppm = parts per million

\*\* ACGIH is American Conference of Governmental Industrial Hygienists

**Table 10.3: Threshold Value Limits for Selected Halogenated Solvents**

### 10.3.2 Air Pollution Control

Normally, gases with unwanted particles would be discharged into the atmosphere, thus polluting the air. A couple of methods are used to prevent free discharge into the atmosphere. One of the most efficient ways is to filter the outcoming gas through fabric filters. Fine fabric woven filters collect easily unwanted particles. The fabric filters are called bags and the place where the collection of dust takes place baghouses.

Electrostatic precipitators are very efficient and are capable of fine control of the particle size. Three types of electrostatic precipitators are used: dry electrostatic precipitators, wet electrostatic precipitators, and ionizing wet scrubbers.

Adsorbers are based on a property of some granular solids, by which they attract particular components (particles) floating in the fluid or gas and retain them on the surface.

Wet scrubbers are used to remove not only particles but also unwanted gases.

#### 10.3.2.1 Emission Reduction

##### Pre-Survey

- 56% Changed/In process of substitution
- 12% Changed process
- 8% Substitute -perc/TCE
- 24% Requested assistance

##### Type of Contamination

- What are the types, quantity and special characteristics?
- Organic - resins, glycols, oils, greases, and waxes
- Water soluble inorganic salts
- Insoluble Particles - dirt, dust, metal fines, etc.
- Does the soil come from an outside source?
- Does the soil come from a production step?

##### The Process to be Performed

- Does the soil come from a production step?
- Can the process be modified to eliminate or minimize soil?
- Are there unnecessary steps resulting in soiling?
- Are oil-based lubricants being used?
- Can water-based lubricants be used?

#### 10.3.2.2 Replacement Solutions and Substitutes

##### Cleaner Substitution Considerations

- Establish Cleaning Standard

## INDUSTRIAL WASTE: CLEANING AND DEGREASING

- Minimize testing
- Selection viz. cleaning efficacy tests
- Health
- Waste Treatment
- Corrosion
- Economy
- Water Quality
  - Good quality and low hardness means longer service life for cleaner
  - Rinse water-deionized water or softened water can be considered

*Final rinse is very important*

### Cleaning Method Evaluation

- Process to be Performed
- Metals
- Soils to be Removed
- Configuration
- Process Time Cycle
- Work load
- Frequency of Equipment Use
- Available Equipment, Space Capital
- Drains and Waste Disposal Method

### Cleaning Method

- Immersion
- Spray
- Electrolytic
- Ultrasonic

### Mechanical Action

1. Turbulence/agitation
2. Abrasives
3. Deformation
4. Ultrasonic Cleaning
5. Heat
6. Electrocleaning (direct current hydrogen scrubbing at the cathode)

### Steps In Equipment Selection Process

1. Cleaning Process Objective
2. Part Analysis
3. Soil Analysis

4. Part Orientation/Material Handling/
5. Production Volume Requirements
6. Plant Layout/Floor Space Requirements
7. Wastewater Management
  - Equipment Selection

### ***10.3.2.3 Aqueous Cleaning***

#### Advantages

- Provides water break-free surface-free of smut or particulate soils- when properly used
- Operating costs are often lower
- Worker exposure to toxic vapors eliminated/reduced
- Eliminates worker and community RTK reporting
- Spent cleaners do not present long-term liability

#### Your Decision to Switch to Aqueous Cleaning Will Mean

- Cleaner parts
- Less expensive cleaning
- Environmentally safer cleaners

#### Benefits Resulting from New Aqueous Cleaning System

- Since eliminating freon, high emission levels of chlorinated solvents are no longer a concern.
- Annual chemical purchases went from \$120,000 in solvents to approx. \$18,000 in aqueous system.
- Solvent system utilized 5 operators, aqueous system only 2 operators.
- Due to extensive filtration and oil removal, waste disposal cost dropped since aqueous chemistry is easily handled in waste treatment system.
- System is personnel and environmentally friendly.
- Approximate annual savings \$180,000.
- Since eliminating perchloroethylene, high emission levels of chlorinated solvents are no longer a concern.
- Better cleaning results due to the new system's ability to remove all of the different processing fluids found on the part.
- Tempering oil usage dropped from 50 to 20 drums.
- Total purchased items dropped from 140 to 30 drums.
- Waste disposal dropped from 85 to 25 drums.
- Elimination of some wash procedures.
- Approximate annual savings of \$60,000.
- Personnel and environmentally friendly.

**REFERENCES**

1. Theodore, L., and McGuinn, Y.C., *Pollution Prevention*, Van Nostrand Reinhold, 1992
2. Bridgewater, A.V., and Mumford, C.J., *Waste Recycling and Pollution Control Handbook*, Van Nostrand Reinhold, 1979
3. Wilson, D.C., *Waste Management Planning, Evaluation, Technologies*, Clarendon Press Oxford, 1981
4. Overcash, M.R., *Techniques for Industrial Pollution Prevention*, Lewis Publishers, 1986
5. U.S. EPA, *Waste Minimization Opportunity Assessment Manual*, EPA/625/7-88/003, 1988